

HOW TO ADJUST HEADREST




To adjust headrest: pull from back on both sides as shown.



Do not pull from side edge to adjust, material may tear.



To return headrest back: push on both sides or use forearm to evenly move headrest back.

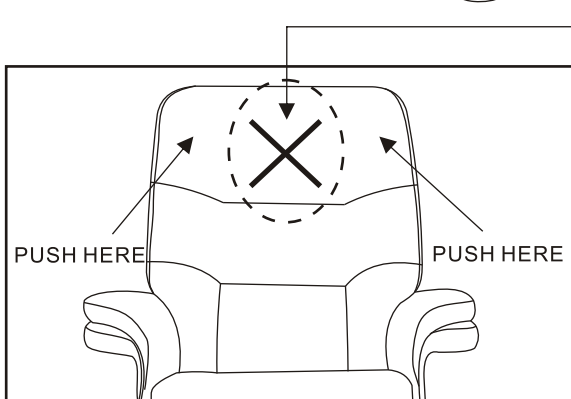

CAUTION-

Do not push in the center of the headrest as this may cause foam cushion to collapse.